


Parental Controls

Parental Locks put you in control of what your family watches. Parental Locks let you block selected ratings, channels, and titles with a Locks Personal Identification Number (PIN).

If you schedule a recording for a program you have locked, the program will be recorded. However, the audio is muted and no video will be visible while the program is recording. A restricted notice will appear allowing you to enter your PIN to view the program during recording.

Lock programs


You can set locks anytime while in the on-screen program guide or while watching television.

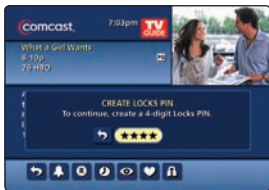


To lock a program or a recording:

1. Press the **Lock**  button on your remote.

— OR —

Select the **Lock**  icon from the Program Information screen in the on-screen program guide.

2. Enter your four-digit PIN. If you are setting a lock for the first time, you will be prompted to set a four-digit PIN. This ensures your settings cannot be modified without your consent.
3. Lock the channel, title, or rating using the on-screen prompts.

A **Lock Indicator**  will appear next to the title in TV Listings to let you know the program is locked.


Tip You may also restrict the purchase of pay programs with a separate Purchase PIN. To change your PIN or set up a Purchase PIN, select **Setup** from the Main Menu, then **PINs Setup**.

Locks Setup

The Locks Setup screen allows you to review all of the locks you currently have set and to make modifications as needed.



To access Locks Setup:


1. Select the **Locks**  icon from the Quick Menu, or select **Parental Controls** from the Main Menu.
2. Use the **▲▼◀▶** buttons on your remote to set or modify locks, hide adult titles, and access master locks.

3. Select **Master Locks** to modify all locks at one time. You can:

- **Bypass Locks** — Temporarily opens all locks for easier viewing when sensitive viewers are not at risk.
- **Clear Locks** — Permanently clears all locks.

4. Press  on your remote to confirm your selections.

View locked programs

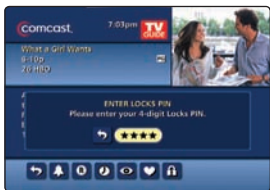

To view a locked program:

1. Select the program from TV Listings, or if it is a recorded program, select it from your list of DVR Recordings.
2. Using your numbered keypad on your remote, enter your PIN when prompted. The program will be displayed.