



Easy steps to use the features of your DVR







How do I record a program?

You can set a recording with just one touch of the remote.

- While in the on-screen program guide, highlight the program you wish to record and press the **Record**  button on your remote. A red dot appears in the Program Information window to indicate the program will be recorded.
- While watching live TV, simply press **Record** . A Recording Started notice appears to indicate recording has begun.





How do I record a series?

1. Highlight the TV series you want to record in the on-screen program guide and select the **Record**  icon to view the overlay screen.
2. Select the **Create a Series Recording**  icon and specify your recording options, such as the type of episode you want to record and how many episodes you want to save.
3. Press the **Record**  or **OK Select**  button to record the series with these options.



How do I watch a recording?

Press the **My DVR** button and select **My Recordings** to view a list of your recorded programs.

1. Highlight a program and press **OK Select** .
2. Press the **Play**  button on your remote.



How do I view a list of programs scheduled to record?

1. Select the **DVR** icon from the Quick Menu.
2. Select **Scheduled Recordings**.



How do I pause, rewind, and instantly replay live TV?

Press **Pause** , **Rewind** , or **Instant Replay**  on your remote.

How do I play in slow-motion?


Press **Pause** , then press **Fast-Forward**  to view slow-motion in forward mode. Or press **Pause** , then **Rewind**  to view slow-motion in reverse mode.

How do I return to live TV?


Press the **LIVE**  button on your remote.

How do I change channels when I am watching a show that I am recording?





When you are watching live TV and you get a message saying that your recording is in progress, select  to **Continue recording, change channels**. You may now watch another program without interrupting your recording.

How do I start a recording early or extend the end time?

1. Select a program from your list of Scheduled Recordings.
2. Select the **Recording Settings**  icon.
3. Arrow down to adjust start and end times.

How do I modify my Series Priority List?

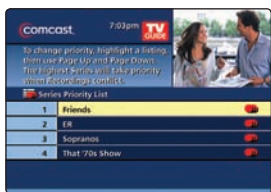

1. Select **DVR** from the Quick Menu.
2. Select **Series Priority**.
3. Highlight a listing and use the **Page Up/Down**  buttons to modify the priorities.

Important notes about your DVR

- DVR is set to save programs until “Space is Needed.” You can change the delete priority to “I Delete” for all programs or for individual programs.
- You can easily determine how much disk space is available by accessing DVR Recordings. The blue bar indicates how much disk space is occupied.
- Parental Locks will not prevent a program from recording. However, the audio is muted and no video appears while it records.
- You cannot record ON DEMAND programs.