


Series recording

DVR makes it easy to record multiple episodes of a TV series.

Record a series

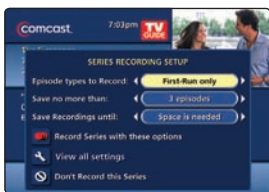

1. Press **Guide** on your remote to view the TV Listings.
2. Highlight the TV series you want to record and press **Record** twice or press **OK Select** on your remote and select the **Record** icon from the Program Information screen.
3. The Confirmation screen appears. Select the **Create a Series Recording** icon.
4. Specify your recording options:
 - **Episode types to Record** — First Run Only, First Run and Repeats, or All Episodes.*
 - **Save no more than** — 1-7, or All Episodes.
 - **Save Recordings until** — “Space is Needed” or “I Delete.”
5. Select the **Record Series with these options** icon to schedule the recording, or select the **View all Settings** icon to access advanced series setup features like adding minutes to the start and end times. See page 15 for more details on recording options.

6. Select the **Confirm Series Recording** icon to confirm the recording.

Note: Your series recordings will appear in your My Recordings list with the show title as its label. Multiple recordings of the same show will have the same label and will be listed beginning with the most recent recordings first.

**All Episodes should only be used when recording shows that do not have unique program IDs, like game shows.*