

Copy recordings to a VHS tape

When you copy recordings to a VHS tape, make sure the recording is displayed on the main TV screen for the entire time the recording is being copied. If you change channels or display other DVR screens during the copying process, your tape will contain these images and you may not have a complete copy of the recording.

1. Connect an RCA video cable (yellow) to the VIDEO OUT (yellow) jack on the DVR and the VIDEO IN port on the VCR.
2. Connect RCA audio cables (one red and one white) to the AUDIO OUT R (red) and AUDIO OUT L (white) jacks on the DVR and to the AUDIO RIGHT and AUDIO LEFT inputs on the VCR.
3. Connect an RCA video cable (yellow) to the VIDEO OUT port on the VCR and the VIDEO INPUT port on the TV.
4. Connect RCA audio cables (one red and one white) to the AUDIO RIGHT and AUDIO LEFT outputs on the VCR and the AUDIO RIGHT and AUDIO LEFT inputs on the TV.
5. Put a tape in your VCR.
6. Select a program from your list of DVR Recordings.
7. From the Program Information screen, select **K** to play from the beginning.
8. Press Record on your VCR. As the recording plays, it is being taped to your VHS tape.

Note: To record high-definition programs to a VHS tape, a high-definition VCR is required in addition to your HD-capable DVR and HDTV and should be hooked up with Y Pb Pr, DVI, or S-Video.